

## electric stacker Parts List 250222

For more spare parts, please contact us. Thank you very much!

1	ABS200-732000-000	Battery cable set(蓄电池电缆组)
2	ABS200-730000-000	Battery assy(蓄电池组合)
3	ABS300-730000-000	Battery assy(蓄电池组合)
4	AD200-790000-000	Power cable group(车身电源电缆组 )
5	AB200-700006-000	Emergency stop switch(紧停开关)
6	AD200-704000-000	Cable(断电开关电缆)
7	QD051-520030-G00	Contactora(接触器)
8	FU-425A-G00	Fuse(熔断器)
9	ADS200-720010-G00	Controller(控制器)
10	AD200-701000-000	Drive motor cable(牵引机电机电缆)
11	AB200-110000-G00	Drive motor(牵引电机)
12	AD200-702000-000	Pump motor cable(油泵电机正电缆)
13	AD200-703000-000	Pump motor cable(油泵电机负电缆)
14	AD120-610000-001	Hydraulic power unit
15	AD200-610000-001	Hydraulic power unit
16	ADS200-700030-000	Height detection switch 1(高度检测开关1)
17	ADS200-700400-500	Limit switch(起升限位开关)
18	ADS200-230000-000	Handle assy(手柄头总成)
19	AD200-706000-001	Handle harness(手柄线束)
20	AB200-707000-000	Interlock switch(互锁开关总成)
21	12DEA-521000-G00	840 Meter(840仪表)
22	AEBS200-701000-000	Key switch(钥匙开关总成)
23	AB200-110000-G00	Drive motor(牵引电机)
24	ABS200-114000-G00	Brake(电磁制动器)
25	AD200-610000-001	Hydraulic power unit(液压单元)
26	AD200-710000-000	Main harness(车身线束)
27	AID200-710000-000	Main harness(车身线束)
28	R450-700200-000	Horn(电喇叭)
29	JD201S-G00	Relay(继电器)
30	ADS200-720010-G00	Controller(控制器)
31	QD051-520030-G00	Contactora(接触器)
32	AD205-720002-000	Radiating plate(散热板 )
33	ADS205-720005-000	COMBI ACX Controller(COMBI ACX控制器)
34	FU-425A-G00	Fuse(熔断器)
35	ADS205-720001-000	B copper strip(B 铜条)
36	G0097P1-000006-00	Washer 6(垫圈6)
37	G000093-000006-00	Washer 6(垫圈6)
38	G005783-006018-00	Bolt M6x18
39	QD051-520030-G00	Contactora(接触器)
40	G0097P1-000008-00	Washer 8(垫圈8)
41	G000093-000008-00	Washer 8(垫圈8)
42	G006170-000008-00	Nut 8(螺母8)
43	G0097P1-000005-00	Washer 5(垫圈5)
44	G000093-000005-00	Washer 5(垫圈5)
45	G000818-005010-00	Screw M5x10(螺钉M5x10)

46	4300531001	Screw (螺钉)
47	AD200-720002-000	Radiating plate(散热板)
48	ADS200-720010-G00	Controller(控制器)
49	G0097P1-000006-00	Washer 6(垫圈6)
50	G000093-000006-00	Washer 6(垫圈6)
51	G005783-006018-00	Bolt M6x18(螺栓M6x18 )
52	30PHD-721101-G00	Fuse bracket(熔断器支架)
53	FU-425A-G00	Fuse(熔断器)
54	G0097P1-000008-00	Washer 8(垫圈8)
55	G000093-000008-00	Washer 8(垫圈8)
56	G006170-000008-00	Nut 8(螺母8)
57	GT070P1-004016-00	Screw M4x16(螺钉M4x16)
58	R450-700200-000	Horn(电喇叭)
59	G005783-008018-00	Bolt M8x18(螺栓M8x18)
60	JD2015-G00	Relay(继电器24 V)
61	G000818-004010-00	Screw M4x10(螺钉M4x10)
62	QD051-520030-G00	Contacto(接触器S W180/24 )
63	G0097P1-000005-00	Washer 5(垫圈5)
64	G000093-000005-00	Washer 5(垫圈5)
65	G000818-005010-00	Screw M5x10(螺钉M5x10)
66	12DEA-521000-G00	840 display(840仪表)
67	ADS205-720007-000	MDI-CAN display(MDI-CAN 仪表)
68	G000818-005010-00	Screw M5x10(螺钉M5x10 )
69	G000093-000005-00	Washer 5(垫圈5)
70	AB200-700006-000	Emergency stop switch(紧停开关)
71	AEBS200-701000-000	Key switch(钥匙开关总成)
72	G005783-006010-00	Bolt M6x10(螺栓M6x10 )
73	G000093-000006-00	Washer 6(垫圈6)
74	G0097P1-000006-00	Washer 6(垫圈6)
75	ADS200-700008-000	Bracket(开关安装板)
76	G005783-006012-00	Bolt M6x12(螺栓M6x12 )
77	ADS200-700003-000	Bracket(支架)
78	ADS200-700007-000	Bracket(开关1支架)
79	G005783-008018-00	Bolt M8x18(螺栓M8x18 )
80	G000093-000008-00	Washer 8(垫圈8)
81	G0097P1-000008-00	Washer 8(垫圈8)
82	ABS200-700030-000	The socket bracket(插座支架)
83	NCM00040.001	Motor 2.2kW(电机2.2kW )
84	NCM00044.001	Motor 3.0kW(电机3.0kW )
85	Q26074090	Bolt 6x40(内六角螺栓6x40)
86	EC003DAA0645	Bolt(螺栓)
87	60410600	Coupling(联轴器)
88	NCJ00025.000	Coupling(联轴器)
89	NCFB1060.000	Screw plug(螺堵G1/4" )
90	S515G02KEL03	Valve block(中心阀块)
91	F7370935	Control valve(节流阀)
92	F7371535	Control valve(节流阀)

93	F749004	Screw plug(节流阀堵)
94	F733006250	Relief valve(溢流阀)
95	F732005	Retaining valve(单向阀)
96	F749001	Screw plug(电磁阀螺堵)
97	NC200085.000	Proportional solenoidvalve(比例阀芯)
98	EC114268	Sealing ring(阀块密封圈)
99	ES52301105B	Return tube(回油管)
100	EC10912.50008	Pump(齿轮泵)
101	EC10913.15008	Pump(齿轮泵)
102	EC009080	Washer 8(垫圈8)
103	EC003DAA0895	Bolt M8x95(内六角螺栓M8x95)
104	ES524AA075	Suction tube(吸油管)
105	ES5063500001	Suction filter(吸油过滤器)
106	49107500	Tank cap(油箱盖)
107	NC900098.004	Tank(油箱)
108	NCFB1083.000	Screw plug(放油堵G1/2)
109	EC003DAA0825	Bolt M8x25(螺栓M8x25)
110	M32050029-000	Mounting flange(安装法兰)
111	AD200-602000-000	Pipe assy(硬管总成)
112	ADS200-600003-000	Pipe clip(管夹)
113	G0097P1-000006-00	Washer 6(垫圈6)
114	G000093-000006-00	Washer 6(垫圈6)
115	G005783-006030-00	Bolt M6x30(螺栓M6x30)
116	AD200-601000-001	Hose assy(胶管总成)
117	AD200-600004-000	Angle coupling(直角接头)
118	AD200-600003-000	Straight joint(直通接头)
119	J000982-000022-00	Washer 22(垫圈22)
120	AD120-610000-001	Hydraulic power unit
121	AD200-610000-001	Hydraulic power unit
122	AD200-600001-001	Bracket(支架)
123	G0097P1-000008-00	Washer 8(垫圈8)
124	G000093-000008-00	Washer 8(垫圈8)
125	G005783-008022-00	Bolt M8x22(螺栓M8x22)
126	G0097P1-000010-00	Washer 10(垫圈10)
127	G000093-000010-00	Washer 10(垫圈10)
128	G005783-010025-00	Bolt M10x25(螺栓M10x25)
129	ADSP120-620001-000	Filter(油尺)
130	AD200-621000-000	Tank(油箱)
131	N163-340002-000	Magnet(磁铁)
132	J000982-000014-00	Washer 14(垫圈14)
133	J001001-0141P5-00	Plug M14x1.5(螺塞 M14x1.5)
134	G000068-006010-00	Screw M6x10(螺钉M6x10)
135	AMD100-600002-000	Rubber mat(橡胶垫)
136	AD200-602000-000	Pipe assy(硬管总成)
137	ADS200-600003-000	Pipe clip(管夹)
138	G000093-000006-00	Washer 6(垫圈6)
139	G005783-006030-00	Bolt M6x30(螺栓M6x30)

140	AD200-601000-000	Hose assy(胶管总成)
141	ADS200-600002-000	Straight joint(直通接头)
142	J000982-000014-00	Washer 14(垫圈14)
143	G006177-000008-00	Nut M8(螺母M8 )
144	AD200-600001-000	Bracket(支架)
145	G005783-006012-00	Bolt M6x12(螺栓M6x12 )
146	AMD100-600100-000	Shock pad(减震垫)
147	G005783-010030-00	Bolt M10x30(螺栓M10x30 )
148	G000093-000010-00	Washer 10(垫圈10)
149	AD120-610000-000	Hydraulic power unit See
150	AD200-610000-000	Hydraulic power unit
151	AD200-600002-000	Rubber mat(橡胶垫)
152	G006170-000006-00	Nut M6(螺母M6 )
153	AEDS140-400001-000	Cushion(缓冲垫)
154	ADS200-400002-000	Bolt M6(固定螺栓M6)
155	AD200-401000-000	Battery cover(电瓶盖)
156	AEBS200-400005-000	Magnent(磁铁)
157	GT070P1-006025-00	Screw M6x25(螺钉M6x25 )
158	G000070-006016-00	Screw M6x16(螺钉M6x16 )
159	G000093-000006-00	Washer 6(垫圈6)
160	G0097P1-000006-00	Washer 6(垫圈6)
161	AB200-401002-000	Right cover(右盘)
162	AB200-401001-000	Left cover(左盘)
163	G005787-008016-00	Bolt M8x16(螺栓M8x16)
164	AD200-400001-000	Cover(上机罩)
165	AD160-410000-000	Frame(车架)
166	AD200-410000-000	Frame(车架)
167	ADB160-410000-000	Frame(车架)
168	ADB200-410000-000	Frame(车架)
169	G006183-000005-00	Nut M5(螺母M5 )
170	ABS200-401003-000	Pad(垫块)
171	GT070P2-005020-00	Screw M5x20(螺钉M5x20 )
172	RT500-400012-000	Clip nut M8(卡式螺母M8)
173	G005782-016090-00	Bolt M16x90(螺栓M16x90 )
174	G000093-000016-00	Washer 16(垫圈16 )
175	G0097P1-000016-00	Washer 16(垫圈16)
176	AEDS140-000002-000	Upper adjusting pad(上调整垫)
177	G0097P1-000014-00	Washer
178	G000093-000014-00	Washer
179	G005785-014055-01	Bolt
180	G006170-000016-00	Nut M16(螺母M16 )
181	AEDS140-000001-000	Lower adjusting pad(下调整垫)
182	G000070-008016-00	Bolt M8x16(螺栓M8x16 )
183	G000093-000008-00	Washer 8(垫圈8)
184	G0097P1-000008-00	Washer 8(垫圈8)
185	ADS200-400004-000	Detection plate(检测板)
186	AEDS140-000003-000	Adjusting pad(调整垫)

187	ADS200-400003-000	Detection plate(检测板)
188	G000070-006016-00	Bolt M6x16(螺栓M6x16 )
189	G0097P1-000006-00	Washer 6(垫圈6)
190	G000093-000006-00	Washer 6(垫圈6)
191	AD160-400002-501	Detection plate(检测板)
192	AMB150-312000-000	Load wheel assy(承载轮总成)
193	AMD100-320000-000	Load wheel assy(承载轮总成)
194	AEBS200-311002-000	Dust cap(防尘盖 )
195	AMB150-312003-000	Shaft sleeve(轴套)
196	GT00276-0006006-02	Bearing 6006-LS(轴承6006-LS)
197	AMB150-312001-000	Loading wheel(承载轮)
198	AMB150-312002-000	Spacer bush(隔套)
199	AEBS200-311003-000	Shaft sleeve(轴套)
200	AEBS200-350007-000	Dust cap(防尘盖 )
201	G0894P1-000030-00	Snap ring A30(轴用弹性挡圈-A型30)
202	AEBS200-350002-000	Washer(垫片)
203	AEBS200-350100-000	Double row bearing(双列圆锥滚子轴承)
204	ADSB140-313000-000	Bearing block(安装座 )
205	G0893P1-000058-00	Snap ring A58(孔用弹性挡圈-A型58)
206	G000889-000010-00	Nut M10(螺母M10 )
207	G000889-000014-00	Nut M14(螺母M14 )
208	ADSB140-311000-000	Bracket assy(上支架总成)
209	G0097P1-000010-00	Washer 10(垫圈10)
210	ADSB140-310001-000	Bolt(螺栓)
211	AMDB100-310001-000	Compression spring(压缩弹簧)
212	ADSB140-312000-000	Bracket assy(下支架总成)
213	G005782-014100-00	Bolt M14x100(螺栓 M14x100 )
214	AEBS200-350006-000	Shaft sleeve(轴套)
215	AMD100-310002-000	Dust cap(防尘盖)
216	GT00276-0006205-02	Bearing 6205-LS(轴承6205-LS )
217	ADS200-310002-000	Balance wheel(辅助轮Φ140x55 )
218	ADS200-310003-000	Shaft sleeve(中间钢套)
219	AEBS200-350009-000	PU spring(聚氨酯弹簧)
220	G005783-014110-00	Bolt M14x110(螺栓 )
221	G006172-000014-00	Nut M14(螺母M14 )
222	ADS200-310004-000	Dust cap(防尘盖)
223	G0894P1-000030-00	Snap ring A30(轴用弹性挡圈-A型30)
224	AEBS200-350002-000	Washer(垫片)
225	ADS200-311000-001	Bearing block(安装座)
226	AEBS200-350100-000	Double row bearing(双列圆锥滚子轴承 )
227	G0893P1-000058-00	Snap ring A58(孔用弹性挡圈-A型58)
228	ADS200-310005-001	Shaft sleeve(轴套)
229	AMD100-310002-000	Dust cap(防尘盖 )
230	GT00276-0006205-02	Bearing 6205-LS(轴承6205-LS )
231	ADS200-310003-000	Shaft sleeve(中间钢套)
232	ADS200-310002-000	Balance wheel(辅助轮Φ140x55)
233	G005782-014120-00	Bolt M14x120(螺栓 M14x120 )

234	ADS200-312000-000	Bracket assy(上支架总成)
235	G005782-014120-00	Bolt M14x100(螺栓 M14x100 )
236	G000889-000014-00	Nut M14(螺母M14 )
237	GT070P1-008020-00	Screw M8x20(螺钉M8x20 )
238	ADS200-313000-001	Bracket assy(下支架总成)
239	ADS200-310001-000	Leaf spring(弹簧片 )
240	G000093-000008-00	Washer 8(垫圈8)
241	G005783-008014-00	Bolt M8x14(螺栓M8x14 )
242	G005783-010035-00	Bolt M10x35(螺栓M10x35)
243	G000093-000010-00	Washer 10(垫圈10)
244	G0097P1-000010-00	Washer 10(垫圈10)
245	ADS200-300001-000	Washer(垫片)
246	ADSB140-310000-000	Balance wheel assy See0801(辅助轮总成 见0801)
247	AEDSB160-300001-000	Shaft(承载轮轴)
248	AMD100-320000-000	Load wheel assy See0901(承载轮总成 见0901)
249	G000879-006075-00	Pin 6x75(销 6x75)
250	G005783-010025-00	Bolt M10x25(螺栓M10x25)
251	G000093-000010-00	Washer 10(垫圈10 )
252	G0097P1-000010-00	Washer 10(垫圈10 )
253	ADS200-300001-000	Washer(垫片)
254	ADS200-310000-001	Balance wheel assy See0701(辅助轮总成 见0701)
255	GT070P3-012095-01	Screw M12x95(螺钉M12x95)
256	AEDS140-300001-000	Plate(夹紧板)
257	AMB150-312000-000	Load wheel assy See0901(承载轮总成 见0901)
258	AEDS140-300002-000	Bushing 252813(衬套252813)
259	JT79404-006000-00	Grease fitting M6(压配式油杯M6)
260	ADS200-230000-001	Control handle(手柄头总成)
261	G005783-008025-00	Screw M8x25(螺钉M8x25)
262	G000093-000008-00	Washer 8(垫圈8)
263	AB200-210000-001	Handle arm(手柄管总成)
264	AB200-230000-000	Gas spring(气弹簧总成)
265	G000093-000010-00	Washer 10(垫圈10)
266	G000070-010016-00	Screw M10x16(螺钉M10x16)
267	G000070-008020-00	Screw M8x20(螺钉M8x20 )
268	AB200-200002-000	Shaft(轴)
269	AMB150-200003-000	Bushing151717(衬套151717 )
270	G000879-005050-00	Pin 5x50(销 5x50 )
271	AB200-220000-000	Support assy(支架总成)
272	G005783-012040-01	Bolt M12x40(螺栓M12x40 )
273	G000093-000012-00	Washer 12(垫圈12 )
274	AB200-201000-000	Steering support(转向支座)
275	AB200-200001-000	Switch protection plate(微动开关防护板)
276	DBS10B-005	Body case(壳体)
277	YQX30-0016	Adjust washer(调整垫)
278	GT00297-0030208-00	Bearing 30208(圆锥滚子轴承30208)
279	DBS10A-001	Washer(垫圈)
280	TC 52x80x8	Oil seal(油封)

281	DBS10A-102	Connecing flange(联接法兰)
282	DBS10-101	Stud(双头螺柱)
283	DBS10-015	Nut(六角法兰面螺母)
284	GT00297-0032010-00	Bearing 32010(圆锥滚子轴承32010)
285	DBS10A-202	Gear(从动螺旋伞齿轮)
286	DBS10A-002	Adjust washer(调整垫)
287	DBS10A-003	Washer(垫圈)
288	G005783-012035-00	Bolt M12x35(六角头螺栓M12x35)
289	DBS10-012	Adjusting pad(调整垫)
290	DBS10-201	Spiral bevel gear(主动螺旋伞齿轮)
291	LM72849 (内)	Tapered roller bearing(圆锥滚子轴承)
292	LM72810 (外)	Tapered roller bearing(圆锥滚子轴承)
293	DBS10B-007	Gear(从动齿轮)
294	DBS10-009	Adjust washer(调整垫)
295	DBS10-011	Washer(垫片)
296	DBS10-010	Nut(螺母)
297	DBS10B-006	Gear(主动齿轮)
298	DBS10B-008	Connection board(连接盘)
299	G001235-015003P1-00	O-Ring 150x3.1(O型密封圈150x3.1)
300	G000070-006015-00	Screw M6x15(内六角圆柱头螺钉M6x15)
301	DBS10-300	Breather plug(通气塞组件)
302	DBS10-013	Cover board(盖板)
303	G001235-013503P1-00	O-Ring 135x3.1(O型密封圈135x3.1)
304	DBS10-014	Sealing gasket(密封垫)
305	SDCS15-111	Magnetic plug(磁性螺塞)
306	JB/ZQ4444-86-M14x1.5	Plug M14x1.5(内六角螺塞M14x1.5)
307	G001235-004702P5-00	O-Ring 47x2.5(O型密封圈47x2.5)
308	ABS200-114000-G00	Electromagnetic brake See0301(电磁制动器 见0301)
309	G0894P1-000020-00	Circlip for shaft 20(轴用弹性挡圈-A型20)
310	AB200-110000-G00	Traction motor(牵引电机)
311	G000070-008075-00	Screw M8x75(螺钉M8x75)
312	G000093-000008-00	Washer 8(垫圈8)
313	GT00276-0006204-06	Bearing 6204-2LS(轴承6204-2LS )
314	G000889-000012-00	Nut M12(螺母M12)
315	G000070-008040-00	Screw M8x40(螺钉M8x40 )
316	AD200-100001-000	Driving seat(驱动座)
317	G005787-016045-01	Bolt M16x45(螺栓M16x45)
318	G000070-008045-00	Screw M8x45(螺钉M8x45 )
319	ABS200-112000-G00	Slewing bearing(回转轴承)
320	AB200-100002-000	Steering seat(人力转向座)
321	ABS200-111000-G00	Transmission See0201(减速箱 见0201)
322	ABS200-110025-000	Driving wheel(驱动轮)
323	NB200-100001-000	Washer(垫圈)