

electric stacker Parts List 250222A

For more spare parts, please contact us. Thank you very much!

0	1.6DJM2.5-700000-002	Mast piping system(油路系统)
1	G001235-002002P4-00	O-Ring
2	1.6DJM2.5-700001-000	Connector(直通管接头)
3	1.6DJM2.5-701000-002	Oil pipe assy(软管总成)
4	1.6DJM2.5-702000-002	Tee(三通)
5	G001235-002002P4-00	O-Ring
6	XSF2-F16L-11-G00	Speed limiting valve(单向限速阀)
7	1.6DJM2.5-703000-000	Oil pipe assy(软管总成)
8	G000093-000008-00	Washer
9	G005783-008016-00	Bolt
10	12DE-400002	Clip(抱箍)
11	1.6DJM1.7-400000-001	Lifting cylinder,Right(右升降油缸)
12	1.6DJM2-400000-001	Lifting cylinder,Right(右升降油缸)
13	1.6DJM2.5-400000-001	Lifting cylinder,Right(右升降油缸)
14	1.6DJM2.7-400000-001	Lifting cylinder,Right(右升降油缸)
15	1.6DJM3-400000-001	Lifting cylinder,Right(右升降油缸)
16	1.6DJM3.3-400000-001	Lifting cylinder,Right(右升降油缸)
17	1.6DJM3.5-400000-001	Lifting cylinder,Right(右升降油缸)
18	1.6DJM3.6-400000-001	Lifting cylinder,Right(右升降油缸)
19	1.6DJM3.7-400000-001	Lifting cylinder,Right(右升降油缸)
20	1.6DJM4-400000-001	Lifting cylinder,Right(右升降油缸)
21	1.6DJM4.3-400000-001	Lifting cylinder,Right(右升降油缸)
22	1.6DJM4.5-400000-001	Lifting cylinder,Right(右升降油缸)
23	1.6DJM1.7-500000-001	Lifting cylinder,Left(左升降油缸)
24	1.6DJM2-500000-001	Lifting cylinder,Left(左升降油缸)
25	1.6DJM2.5-500000-001	Lifting cylinder,Left(左升降油缸)
26	1.6DJM2.7-500000-001	Lifting cylinder,Left(左升降油缸)
27	1.6DJM3-500000-001	Lifting cylinder,Left(左升降油缸)
28	1.6DJM3.3-500000-001	Lifting cylinder,Left(左升降油缸)
29	1.6DJM3.5-500000-001	Lifting cylinder,Left(左升降油缸)
30	1.6DJM3.6-500000-001	Lifting cylinder,Left(左升降油缸)
31	1.6DJM3.7-500000-001	Lifting cylinder,Left(左升降油缸)
32	1.6DJM4-500000-001	Lifting cylinder,Left(左升降油缸)
33	1.6DJM4.3-500000-001	Lifting cylinder,Left(左升降油缸)
34	1.6DJM4.5-500000-001	Lifting cylinder,Left(左升降油缸)
35	1.6DJM2.5-400001-W00	Piston rod(活塞杆)
36	CL0077C2-G00	Dustproof ring
37	1.6DJM2.5-400002-W00	Snap ring(挡圈)
38	FU0497K0-G00	ISI-seal ring
39	SF-1-4030-G00	Combination bush
40	2.5CDJ32-00-07	Exit plug(放气螺塞)
41	G001235-001602P4-00	O-Ring
42	G001235-005603P5-00	O-Ring
43	G000074-006006-00	Screw
44	3M3H-400002	Plug(塞子)

45	1.6DJM2.5-400003-W00	Cylinder cover(缸盖)
46	1.6DJM2.5-401000-W01	Cylinder body,Right(右缸体)
47	1.6DJM2.5-501000-W01	Cylinder body,Left(左缸体)
48	1.5U3H-400003	Piston(支撑环)
49	1.5M3H-400005	Snap ring(钢丝挡圈)
50	1.6DEM3H*500004	Piston(活塞)
51	1.2DEM3*500007	Sleeve(铜套)
52	G0893P1-000024-00	Washer
53	G001235-002002P4-00	O-Ring
54	1.6DJM2.5-502000-W00	Nozzle components(油嘴组件)
55	1.2DSM1.7-400000-000	Lifting cylinder,Right(右升降油缸)
56	1.2DSM2-400000-000	Lifting cylinder,Right(右升降油缸)
57	1.2DSM2.5-400000-000	Lifting cylinder,Right(右升降油缸)
58	1.2DSM2.7-400000-000	Lifting cylinder,Right(右升降油缸)
59	1.2DSM3-400000-000	Lifting cylinder,Right(右升降油缸)
60	1.2DSM3.3-400000-000	Lifting cylinder,Right(右升降油缸)
61	1.2DSM3.5-400000-000	Lifting cylinder,Right(右升降油缸)
62	1.2DSM3.6-400000-000	Lifting cylinder,Right(右升降油缸)
63	1.2DSM3.7-400000-000	Lifting cylinder,Right(右升降油缸)
64	1.2DSM4-400000-000	Lifting cylinder,Right(右升降油缸)
65	1.2DSM4.3-400000-000	Lifting cylinder,Right(右升降油缸)
66	1.2DSM4.5-400000-000	Lifting cylinder,Right(右升降油缸)
67	1.2DSM1.7-500000-000	Lifting cylinder,Left(左升降油缸)
68	1.2DSM2-500000-000	Lifting cylinder,Left(左升降油缸)
69	1.2DSM2.5-500000-000	Lifting cylinder,Left(左升降油缸)
70	1.2DSM2.7-500000-000	Lifting cylinder,Left(左升降油缸)
71	1.2DSM3-500000-000	Lifting cylinder,Left(左升降油缸)
72	1.2DSM3.3-500000-000	Lifting cylinder,Left(左升降油缸)
73	1.2DSM3.5-500000-000	Lifting cylinder,Left(左升降油缸)
74	1.2DSM3.6-500000-000	Lifting cylinder,Left(左升降油缸)
75	1.2DSM3.7-500000-000	Lifting cylinder,Left(左升降油缸)
76	1.2DSM4-500000-000	Lifting cylinder,Left(左升降油缸)
77	1.2DSM4.3-500000-000	Lifting cylinder,Left(左升降油缸)
78	1.2DSM4.5-500000-000	Lifting cylinder,Left(左升降油缸)
79	1.2DSM2.5-400001-W00	Piston rod(活塞杆)
80	CL0066C1-G00	Dustproof ring
81	1.2DEM3*500002	Snap ring
82	FU0424K0-G00	ISI-seal ring
83	SF-1-3530-G00	Combination bush(复合衬套)
84	1.2DEM3*500009	Exit plug
85	G001235-001602P4-00	O-Ring
86	G001235-005203P5-00	O-Ring
87	G000074-006006-00	Screw
88	3M3H-400002	Plug(塞子)
89	1.2DSM2.5-400002-W00	Cylinder cover(缸盖)
90	1.2DSM2.5-401000-W00	Cylinder body,Right(右缸体)
91	1.2DSM2.5-501000-W00	Cylinder body,Left(左缸体)

92	1.2DEM3*500004	Piston
93	1.5M3H-400005	Snap ring(钢丝挡圈)
94	1.2DEM3*500005A	Piston(活塞)
95	1.2DEM3*500007	Sleeve(铜套)
96	G0893P1-000024-00	Washer
97	G001235-002002P4-00	O-Ring
98	1.2DEM3-402000-W00	Nozzle components(油嘴组件)
99	1.6DJM2.5-001000-001	Lifting chain assembly(链条总成)
100	1.5M3H-002001	Connector(链条接头)
101	G006171-000016-02	Nut
102	G000091-3P2020-00	Pin
103	1.5M3H-002002	Pin shaft(销轴)
104	GT06074-1223087-00	Chain
105	1.2DSM2.5-300000-000	Fork arm carriage(货叉架总成)
106	1.4DJM2.5-300000-000	Fork arm carriage(货叉架总成)
107	1.6DJM2.5-300000-000	Fork arm carriage(货叉架总成)
108	1.2DSM2.5-301000-000	Lifting bracket(货叉架体)
109	1.6DJM2.5-301000-001	Lifting bracket(货叉架体)
110	1.2DJM2.5-200001-000	Ajust shim(垫块)
111	1.2DJM2.5-202000-000	Side roller(侧滚轮组)
112	G000093-000008-00	Washer 8(垫圈8)
113	G005782-008020-00	Blot
114	G0097P1-000008-00	Washer 8(垫圈8)
115	G000095-000008-00	Washer 8(垫圈8)
116	35ZK-G00	Roller(起升滚轮)
117	G0894P1-000035-00	Snap ring
118	1.2DSM2.5-302000-000	Fork arm,Left(左货叉总成)
119	1.2DJM2.5-301200-000	Fork arm,Left(左货叉总成)
120	1.6DJM2.5-302000-001	Fork arm,Left(左货叉总成)
121	1.2DSM2.5-303000-000	Fork arm,Right(右货叉总成)
122	1.2DJM2.5-301300-000	Fork arm,Right(右货叉总成)
123	1.6DJM2.5-303000-000	Fork arm,Right(右货叉总成)
124	1.2DSM1.7-201000-000	Inside mast(内门架)
125	1.2DSM2-201000-000	Inside mast(内门架)
126	1.2DSM2.5-200000-000	Inside mast(内门架)
127	1.2DSM2.7-201000-000	Inside mast(内门架)
128	1.2DSM3-201000-000	Inside mast(内门架)
129	1.2DSM3.3-201000-000	Inside mast(内门架)
130	1.2DSM3.5-201000-000	Inside mast(内门架)
131	1.2DSM3.6-201000-000	Inside mast(内门架)
132	1.2DSM3.7-201000-000	Inside mast(内门架)
133	1.2DSM4-201000-000	Inside mast(内门架)
134	1.2DSM4.3-201000-000	Inside mast(内门架)
135	1.2DSM4.5-201000-000	Inside mast(内门架)
136	1.6DJM1.7-201000-000	Inside mast(内门架)
137	1.6DJM 2-201000-000	Inside mast(内门架)
138	1.6DJM2.5-200000-000	Inside mast(内门架)

139	1.6DJM 2.7-201000-000	Inside mast(内门架)
140	1.6DJM 3-201000-000	Inside mast(内门架)
141	1.6DJM 3.3-201000-000	Inside mast(内门架)
142	1.6DJM 3.5-201000-000	Inside mast(内门架)
143	1.6DJM 3.6-201000-000	Inside mast(内门架)
144	1.6DJM 3.7-201000-000	Inside mast(内门架)
145	1.6DJM 4-201000-000	Inside mast(内门架)
146	1.6DJM 4.3-201000-000	Inside mast(内门架)
147	1.6DJM 4.5-201000-000	Inside mast(内门架)
148	1.2DSM2.5-201000-000	Inside mast(内门架体)
149	1.6DJM2.5-201000-000	Inside mast(内门架体)
150	1.2DJM2.5-200001-000	Ajust shim(垫块)
151	1.2DJM2.5-202000-000	Side roller(侧滚轮组)
152	G000093-000008-00	Washer 8(垫圈8)
153	G000095-000008-00	Washer 8(垫圈8)
154	G005782-008035-00	Blot
155	35ZK-G00	Roller(起升滚轮)
156	G0894P1-000035-00	Snap ring
157	1.2DSM1.7-100000-000	Outside mast (外门架)
158	1.2DSM2-100000-000	Outside mast (外门架)
159	1.2DSM2.5-100000-000	Outside mast (外门架)
160	1.2DSM2.7-100000-000	Outside mast (外门架)
161	1.2DSM3-100000-000	Outside mast (外门架)
162	1.2DSM3.3-100000-000	Outside mast (外门架)
163	1.2DSM3.5-100000-000	Outside mast (外门架)
164	1.2DSM3.6-100000-000	Outside mast (外门架)
165	1.2DSM3.7-100000-000	Outside mast (外门架)
166	1.2DSM4-100000-000	Outside mast (外门架)
167	1.2DSM4.3-100000-000	Outside mast (外门架)
168	1.2DSM4.5-100000-000	Outside mast (外门架)
169	1.6DJM1.7-100000-001	Outside mast (外门架)
170	1.6DJM2-100000-001	Outside mast (外门架)
171	1.6DJM2.5-100000-000	Outside mast (外门架)
172	1.6DJM2.7-100000-001	Outside mast (外门架)
173	1.6DJM3-100000-001	Outside mast (外门架)
174	1.6DJM3.3-100000-001	Outside mast (外门架)
175	1.6DJM3.5-100000-001	Outside mast (外门架)
176	1.6DJM3.6-100000-001	Outside mast (外门架)
177	1.6DJM3.7-100000-001	Outside mast (外门架)
178	1.6DJM4-100000-001	Outside mast (外门架)
179	1.6DJM4.3-100000-001	Outside mast (外门架)
180	1.6DJM4.5-100000-001	Outside mast (外门架)
181	1.2DSM1.7-200000-000	Inside mast(内门架)
182	1.2DSM2-200000-000	Inside mast(内门架)
183	1.2DSM2.5-200000-000	Inside mast(内门架)
184	1.2DSM2.7-200000-000	Inside mast(内门架)
185	1.2DSM3-200000-000	Inside mast(内门架)

186	1.2DSM3.3-200000-000	Inside mast(内门架)
187	1.2DSM3.5-200000-000	Inside mast(内门架)
188	1.2DSM3.6-200000-000	Inside mast(内门架)
189	1.2DSM3.7-200000-000	Inside mast(内门架)
190	1.2DSM4-200000-000	Inside mast(内门架)
191	1.2DSM4.3-200000-000	Inside mast(内门架)
192	1.2DSM4.5-200000-000	Inside mast(内门架)
193	1.6DJM 1.7-200000-000	Inside mast(内门架)
194	1.6DJM 2-200000-000	Inside mast(内门架)
195	1.6DJM2.5-200000-000	Inside mast(内门架)
196	1.6DJM 2.7-200000-000	Inside mast(内门架)
197	1.6DJM 3-200000-000	Inside mast(内门架)
198	1.6DJM 3.3-200000-000	Inside mast(内门架)
199	1.6DJM 3.5-200000-000	Inside mast(内门架)
200	1.6DJM 3.6-200000-000	Inside mast(内门架)
201	1.6DJM 3.7-200000-000	Inside mast(内门架)
202	1.6DJM 4-200000-000	Inside mast(内门架)
203	1.6DJM 4.3-200000-000	Inside mast(内门架)
204	1.6DJM 4.5-200000-000	Inside mast(内门架)
205	1.2DSM2.5-300000-000	Fork arm carriage(货叉架总成)
206	1.4DJM2.5-300000-000	Fork arm carriage(货叉架总成)
207	1.6DJM2.5-300000-000	Fork arm carriage(货叉架总成)
208	1.6DJM2.5-001000-001	Lifting chain assembly(起升链条总成)
209	1.2DSM2.5-400000-000	Lifting cylinder,Right(右升降油缸)
210	1.6DJM2.5-400000-001	Lifting cylinder,Right(右升降油缸)
211	1.2DSM2.5-500000-000	Lifting cylinder,Left(左升降油缸)
212	1.6DJM2.5-500000-001	Lifting cylinder,Left(左升降油缸)
213	1.2DJM2.5-202000-000	Side roller(侧滚轮组)
214	1.5M3H-000003	Adjust shim(调整垫圈)
215	1.6DEM3-000001	Adjust shim(调整垫圈)
216	G000093-000012-00	Washer
217	G005782-012050-00	Bolt
218	780708F1-G00	Chain wheel(链轮)
219	G0894P1-000040-00	Snap ring
220	1.2DSM2.5-000001-000	U-Bolt(U形螺栓)
221	N15N450-000005-000	U-Bolt(U形螺栓)
222	G006170-000008-00	Nut
223	G0097P1-000008-00	Washer
224	G000923-000008-00	Nut
225	N30N450-000005 -001	Screw
226	G006170-000020-00	Nut
227	1.6DFM3-004000-000	Cylinder support(油缸支撑)
228	1.6DJM2.5-002000-000	Cylinder support(油缸支撑)
229	N30M300-000014-000	Shim(导轨衬垫)
230	1.6DJM2.5-000001-000	Adjust shim(调整垫片)
231	35ZK-G00	Lift roller(起升滚轮)
232	G0894P1-000035-00	Snap ring

233	G005782-008030-00	Bolt
234	G000093-000008-00	Washer 8(垫圈8)
235	1.2DJM2.5-200001-000	Ajust shim(垫块)
236	G000095-000008-00	Washer 8(垫圈8)
237	1.6DJM2.5-000002-000	Shim(垫片)
238	1.6DJM2.5-700000-002	Mast piping(油路系统)
239	1.6DJM2.5-801000-900	Below protection net(下防护网)
240	1.6DFM3-800001-900	Plate(扣板)
241	G000093-000008-00	Washer 8(垫圈8)
242	G005783-008020-00	Bolt
243	1.6DJM2.5-801000-900	Up protection net(上防护网)
244	1.6DJM2.5-802001-900	Plate(搭板)
245	G000812-000027-01	Nut
246	G000858-000027-00	Washer
247	12DE-610005	Dust shield(防尘板)
248	GT00297-0030206-00	Bearing
249	12DE-611000	Junction plate(连接板)
250	GT00297-0030306-00	Bearing
251	SW200-511000-001	Backing plate(下支板)
252	12DE-610004	Axis(轴)
253	12DE-610003	Check ring(挡圈)
254	G000093-000008-00	Washer 8(垫圈8)
255	G005783-008016-00	Bolt
256	G00886-025032-00	Check ring
257	GT00276-00062505-02	Bearing
258	12DE-610002	Training Wheel(辅助轮)
259	G000879-006040-00	Pin
260	JW200-500002-000	Shaft(轴)
261	SD160-301000-000	Bracket(前轮支架)
262	SW200-501000-000	Load wheel(承载轮)
263	SD160-300002-000	Shaft sleeve(轴套)
264	SD160-300001-000	Long shaft(长轴)
265	G002673-008016-00	Screw
266	G000093-000008-00	Washer 8(垫圈8)
267	G0097P1-000008-00	Washer 8(垫圈8)
268	JD120-301000-000	Shaft(销轴组件)
269	HTHW85X11025-115KG00	Load wheel(承载轮)
270	G005783-010020-00	Bolt
271	G000093-000010-00	Washer 10(垫圈10)
272	G0097P1-000010-00	Washer 10(垫圈10)
273	SD160-610000-000	Hydraulic unit(液压单元总成)
274	G000070-008016-00	Screw
275	G000093-000008-00	Washer 8(垫圈8)
276	G0097P1-000008-00	Washer 8(垫圈8)
277	12DE-400002	Hoop(抱箍)
278	J000982-000018-00	Washer 18(垫圈18)
279	12DE-400003	Connector(管接头)

280	SD160-620000-001	Rubber pipe assy(胶管总成)
281	SD140-620000-001	Rubber pipe assy(胶管总成)
282	J000982-000018-00	Washer 18(垫圈18)
283	12DE-400003	Connector(管接头)
284	SD160-620000-000	Rubber pipe assy(硬管总成)
285	SD120-610000-000	Hydraulic unit(液压动力单元)
286	G000070-006014-00	Screw
287	G000093-000006-00	Washer 6(垫圈6)
288	G0097P1-000006-00	Washer 6(垫圈6)
289	12DE-400002	Hoop(抱箍)
290	SD140-630000-000	Rubber pipe assy(胶管总成)
291	G0097P1-000010-00	Washer 10(垫圈10)
292	G000093-000010-00	Washer 10(垫圈10)
293	G005783-010020-00	Bolt
294	3M3H-700011	Connector(直通接头)
295	SD160-640000-000	Rubber pipe assy(胶管总成)
296	G001235-001802P4-00	O-Ring
297	JD120-600005-000	Connector(直通接头)
298	SD120-630000-000	Rubber pipe assy(胶管总成)
299	SD160-721000-G00	Controller(控制器)
300	FU-10A-G00	FUSE(熔断器)
301	FU-250A-G00	FUSE(熔断器)
302	SW80/24-G00	Contactora(接触器)
303	FU-200A-G00	FUSE(熔断器)
304	G000067-006010-00	Screw
305	SW200-800001-000	Pedal pad(踏板垫)
306	SW200-810002-000	Panel(面板)
307	SW200-810003-000	Stiffener(加强筋)
308	SW200-810006-000	Right plate bending(右弯板)
309	SW200-810005-000	Left plate bending(左弯板)
310	SW200-831000-W00	Gas spring(气弹簧)
311	SW200-830002-000	Composite bushing
312	SW200-830001-000	Axis(轴)
313	G000882-010024-00	Pin
314	G000091-3P2020-00	Pin
315	G000889-000012-00	Nut
316	SW200-840003-000	Nut(调整螺母)
317	G0097P1-000014-00	Washer 14(垫圈14)
318	SW200-840001-000	Spring(弹簧)
319	G0097P1-000016-00	Washer 16(垫圈16)
320	SW200-840002-000	Axis-oriented(导向轴)
321	SW200-810007-000	Plane(板)
322	G005783-006016-00	Bolt
323	G000093-000006-00	Washer 6(垫圈6)
324	SW200-820002-000	Plane(板)
325	SW200-820001-000	Axis(轴)
326	JW200-300003-000	Sleeve(轴套)

327	SW200-811001-000	Ear plate(耳板)
328	SW200-811002-000	Horizontal plate(横板)
329	SW200-810001-000	Back plane(底板)
330	SW200-810004-000	Stiffener(加强筋)
331	SW200-920003-000	Right panel(右面板)
332	SW200-910002-000	Ribs(筋板)
333	SW200-910001-000	Sleeve(轴套)
334	G000879-012045-00	Pin
335	SW200-930001-000	Axis(轴)
336	SW200-930003-000	Cylindrical(圆柱)
337	SW200-930002-000	Panel(板)
338	SW200-920004-W00	Right Cushion(右靠垫)
339	SW200-910004-W00	Left Cushion(左靠垫)
340	SW200-910003-000	Left panel(左面板)
341	SW200-940000-000	Gas spring(气弹簧)
342	GT070P2-008020-00	Screw
343	G0097P1-000008-00	Washer(垫圈8)
344	SD160-400001-000	Cover(仪表板)
345	SD160-402000-000	Cover(后机罩)
346	SD120-410000-000	Truck frame(车架)
347	SD140-410000-000	Truck frame(车架)
348	SD160-410000-000	Truck frame(车架)
349	SD120-400004-000	Cover(前机罩)
350	SD160-400002-000	Cover(前机罩)
351	G000093-000010-00	Washer 10(垫圈10)
352	JD120-400005-000	Blot(螺栓)
353	JW200-200001-000	Controlling handle(控制手柄)
354	G000093-000008-00	Washer 8(垫圈8)
355	G005783-008025-00	Bolt
356	JD120-200001-000	Pin(销)
357	G000070-008025-00	Screw
358	G000290-0222820-00	Bearing
359	JD120-200006-000	Axle sleeve(轴套)
360	JD120-200003-000	Bolt(螺栓)
361	G000070-008020-00	Screw
362	SW200-210000-000	Steering pipe(转向管)
363	G0894P1-000008-00	Snap ring(挡圈8)
364	JW200-500001-000	Air spring(气弹簧)
365	SW200-200001-000	Steering seat(转向座)
366	SW201-210000-000	Steering shaft(转向轴)
367	JB/T10238	Tapered roller bearings(圆锥滚子轴承)
368	DBS10-001	Adjust washer(调整垫)
369	DBS10-100	Output flangcombinations(输出法兰组合)
370	GB6177-86	Nut
371	GB5783-86	Bolt
372	GB856-88	External tab washer
373	DBS10-002	Adjust washer(调整垫)

374	DBS10-003	Washer(垫圈)
375	TC 52x68x8	Oil seal(油封)
376	DBS10-004	Snap ring(挡圈)
377	DBS10-2000	Spiral bevel gear components(螺旋伞齿轮组件)
378	LM72849 (内)	Tapered roller bearings(圆锥滚子轴承)
379	LM72810 (外)	Tapered roller bearings(圆锥滚子轴承)
380	DBS10-005	Tor-con(壳体)
381	DBS10-006	Initiative(主动齿轮)
382	DBS10-007	Bevel gear(从动齿轮)
383	GB1235-76	O-Ring
384	DBS10-008	Board(端板)
385	GB70-85	ScREW
386	DBS10-009	Adjust washer(调整垫)
387	DBS10-300	Blowhole(气帽组件)
388	DBS10-010	Nut(螺母)
389	DBS10-011	Washer(垫片)
390	DBS10-012	Adjust washer(调整垫)
391	GB70-85	Screw
392	GB1235-76	O-Ring
393	DBS10-013	Cover board(盖板)
394	GB119-86	Pin(圆柱销)
395	DBS10-014	Seal washer(密封垫)
396	JB/ZQ4444-86	Plug
397	G00882-010050-01	Pin shaft
398	SW201-130000-000	Absorber assembly(减震器总成)
399	G0097P1-000010-00	Washer 10(垫圈10)
400	G000091-3P2022-00	Split pin
401	SW200-100002-000	Link(上连杆)
402	SW200-100007-000	Bolt(螺栓)
403	SW200-100005-000	pacer(轴套)
404	G005783-008020-00	Bolt M8x20(螺栓M8x20)
405	G000093-000008-00	Washer 8(垫圈8)
406	SW200-101000-000	Connector shaft(连接轴)
407	G005783-006025-00	Bolt M6x25(螺栓M6x25)
408	G000093-000006-00	Washer 6(垫圈6)
409	12DE-100001	Limiting plate(限位板)
410	SW200-100003-00	Link(下连杆)
411	G001152-006000-00	Oil cup M6(油杯M6)
412	SW201-110000-000	Drive and transmission(驱动单元)
413	G005783-010045-00	Bolt
414	G000093-000010-00	Washer 10(垫圈10)
415	SW201-120000-000	Bracket(支架)
416	SW201-100003-000	Wire plate(导线板)
417	G000070-006020-00	Screw
418	SW201-100002-000	Steering bracket(转向支架)
419	GB5783-86	Bolt
420	GB6170-86	Nut M8(螺母M8)