

Pallet Truck with Scale Parts List 1

For more spare parts, please contact us. Thank you very much!

No.	Parts Number	Products Name
1	20010201	Handle body
2	20010202	Spring pin
3	20010203	Blade Spring
4	20010204	Spring pin
5	20010205	Roller
6	20010206	Control Handle
7	20010207	Spring pin
8	20010208	Spring pin
9	20010209	Release Rod and chain assy.
10	20010210	Pressure Roller
11	20010211	Roller Axle
12	20010212	Bushing
13	20010213	Handle axle
14	20010214	Handle assy.
15	20010301	Weighing plate
16	20010302	Positioning screw
17	20010303	Frame
18	20010304	Screw
19	20010305	The weighing sensor
20	20010306	Spring washer
21	20010307	Screw
22	20010308	Spring pin
23	20010309	The movable wheel frame
24	20010310	Bearing
25	20010311	The wheel
26	20010312	Wheel arle
27	20010313	The swing wheel frame
28	20010314	Shaft
29	20010315	Spring pin
30	20010316	Shaft
31	20010317	Pin shaft
32	20010318	The major axis
33	20010319	Ring
34	20010320	Pull rod
35	20010321	The wire ring
36	20010322	Screw shaft
37	20010323	Nut
38	20010324	Fork joint
39	20010325	Ring
40	20010326	Joint pin
41	20010327	Bush

42	20010328	Connecting rod
43	20010329	Screw
44	20010330	Washer
45	20010331	Spring washer
46	20010332	Screw
47	20010333	Instrument box
48	20010334	Screw
49	20010335	Weight meter
50	20010336	Installed board
51	20010337	Screw
52	20010338	Printer
53	20010339	Charger
54	20010340	Battery
55	20010341	Instrument box with printer
56	20010342	Weight meter with printer
57	20010101	Steel ball
58	20010102	Piston rod
59	20010103	Dust ring
60	20010104	O-ring
61	20010105	Cylinder
62	20010106	Seal washer
63	20010156	O-ring
64	20010107	Seal ring
65	20010108	Pump body
66	20010109	Axis pin
67	20010110	Elastic pin
68	20010111	Pin
69	20010118	Pump rod
70	20010119	Spring cover
71	20010120	Spring
72	20010121	Dust ring
73	20010122	Seal ring
74	20010124	Elastic pin
75	20010146	Crank link
76	20010147	Nutsert
77	20010148	Adujusting screw
78	20010126	Bearing
79	20010127	Retaining ring
80	20010128	Rhombus plate
81	20010129	Elastic pin
82	20010130	Movable pin
83	20010131	Tralling axle
84	20010132	Bearing
85	20010133	Steering wheel

86	20010134	Retaining ring
87	20010135	Dust cover
88	20010149	Oil cylinder assy.
89	20010150	Pressure valve assy.
90	20010151	Pump piston assy.
91	20010152	Steering wheel assy (With bearing)
92	20010153	Overflow valve assy,
93	20010154	Bleed-off valve assy.
94	20010155	Pedal assy.
95	20010400	New pump assy.
96	20010401	Small pump core
97	20010402	Cover of spring
98	20010403	Big spring cap
99	20010404	Dust ring
100	20010405	Seal washer
101	20010406	Small cylinder
102	20010407	Copper gasket
103	20010408	Dust ring
104	20010409	O-ring
105	20010410	Seal washer
106	20010411	Slide bushing
107	20010412	O-ring
108	20010413	Steel ball
109	20010414	Piston rod
110	20010415	Pump body
111	20010416	Bolt
112	20010417	Seal
113	20010418	Relief valve
114	20010419	Safety valve
115	20010420	Check valve
116	20010421	Lever plate
117	20010422	Spring pin
118	20010423	Bolt
119	20010424	Nut
120	20010425	Pump seal kits
121	20010124	Elastic pin
122	20010126	Bearing
123	20010127	Retaining ring
124	20010128	Rhombus plate
125	20010129	Elastic pin
126	20010130	Movable pin
127	20010131	Tralling axle
128	20010132	Bearing
129	20010133	Steering wheel

130	20010134	Retaining ring
131	20010135	Dust cover
132	20010152	Steering wheel assy (With bearing)