

electricc Pallet Truck Parts List 250219

For more spare parts, please contact us. Thank you very much!

1	5300500004	Handle assembly(手柄总成)
2	2000508001	Outer covering plate(手柄座盖板)
3	2000537002	Washer(垫圈)
4	2000541002	Screw(螺钉)
5	2000512002	Lubricated bush(自润滑轴承)
6	2000513001	Pin shaft(销轴)
7	2000536001	Spring pin(弹性销)
8	2000534003	Rubber washer(缓冲垫)
9	2000931004	Screw(螺钉)
10	2000534002	Rubber sleeve(轴套)
11	2000513003	Pin shaft(销轴)
12	2000541004	Screw(螺钉)
13	4300534001	Rubber sack(橡胶密封圈)
14	2000525004	Screw(螺钉)
15	2000535005	Installing plate(调整块)
16	2000504001	Steel ball(钢球)
17	2000507004	Inching switch(微动开关)
18	2000537003	Washer(垫圈)
19	2000541001	Screw(螺钉)
20	2000541003	Screw(螺钉)
21	2000537001	Washer(垫圈)
22	2000508002	Inner covering plate(盖板)
23	4000501002	Handle socket(手柄座)
24	4000517004	Cannula(手把连接套)
25	7300500001	Electron handgrip(电子转向)
26	5501221001	Gear(主动齿轮)
27	5500521001	Gear(被动齿轮)
28	9300200001	Sensor assembly(传感器总成)
29	5300500005	Handle assembly(手柄总成)
30	4300500005	Switch box assembly (控制盒总成)
31	4300508001	Emergency reverser button cover (紧急换向按钮盖)
32	2000519004	Spring (弹簧)
33	4300500007	Cover assembly (手柄盖总成)
34	4300500004	Stepped switch assembly (行走开关总成)
35	2000507002	Emergency reverser button (紧急换向按钮)
36	4300517001	Handle (手柄)
37	6000131007	Screw (螺钉)
38	1001437003	Washer (垫圈)
39	1200518001	Supporting plate (支撑板)
40	3201431001	Screw (螺钉)
41	6000131006	Screw (螺钉)
42	9300517001	Seat (微动开关座)
43	1000515002	Shell (接插件母胶壳)
44	1000515001	Shell (接插件公胶壳)
45	2000130002	Screw (螺栓)

46	7800321001	Gear (齿轮)
47	2000125001	Nut (螺母)
48	2000121006	Gear (齿轮)
49	2000120003	Bearing (轴承)
50	2000141001	Screw (螺栓)
51	2000625001	Bolt (六角头螺栓)
52	2000603010	Washer (垫圈)
53	2000111002	Sider cover (箱体侧盖)
54	2000128002	O-ring (O 型圈)
55	4600113001	Nut (螺母)
56	2000121002	Gear (齿轮)
57	2000120002	Bearing (轴承)
58	2000137001	Washer (垫圈)
59	2000137002	Washer (垫圈)
60	4000201001	Gear (齿轮)
61	4000101001	Flat (平键)
62	2001037001	Circlip (弹性挡圈)
63	2000731003	Screw (螺栓)
64	2000120001	Bearing (轴承)
65	2000105001	Seal washer (密封圈)
66	4600113002	Spline Shaft (花键轴)
67	2000126001	Gear box body (齿轮箱箱体)
68	7800300003	Gear box assembly (变速箱总成)
69	5300500004	Handle assembly (手柄总成)
70	5300500002	Switch box assembly (控制盒总成)
71	2000442001	Screw (螺钉)
72	4300501004	Handle tube (铝手把)
73	6000502002	Pneumatic spring seat (气弹簧座)
74	2000525012	Joint (气弹簧球头)
75	4000519004	Pneumatic spring complete (气弹簧)
76	2000527002	Snap ring (挡圈)
77	2000520003	Joint (下接头)
78	2000525006	Shaft (轴)
79	1000527001	Snap ring (挡圈)
80	4300501003	Covering plate (盖板)
81	2000542001	Screw (螺钉)
82	4300500004	Stepped switch assembly (行走开关总成)
83	2000538005	Screw (螺钉)
84	2000507003	Inching switch (微动开关)
85	2000535001	Isolate block (绝缘块)
86	2001141005	Screw (螺栓)
87	4300518003	Fastening bracket (固定支架)
88	1000504001	Washer (垫圈)
89	2000539002	Nut (螺母)
90	4300501005	Cam (凸轮)
91	4300513001	Cam Shaft (凸轮安装轴)
92	1002343003	Rack (齿条)

93	2000519004	Spring (弹簧)
94	4300900002	Screw (螺钉)
95	2001437005	Spring washer (垫圈)
96	4300540001	Right control knob (右控制手柄)
97	4300512001	Shaft sleeve (轴套)
98	4300535001	Fastening bracket (固定支架)
99	2000541004	Screw (螺钉)
100	4300540002	Left control knob (左控制手柄)
101	4300518004	Baffle (挡板)
102	2000521001	Gear (齿轮)
103	4700418001	Fastening bracket (固定支架)
104	4700400001	Potentiometer (电位器)
105	7800330001	Screw (螺钉)
106	7800311001	Washer (垫圈)
107	7800318001	Bracket (变速上浮动挡)
108	7800313001	Axostyle (滑动轴)
109	5800318001	Spring (弹簧)
110	7800300001	Electromotor (电动机)
111	1000131001	Screw (螺钉)
112	2001037001	Washer (垫圈)
113	9300400002	Encoder (编码器总成)
114	5501221004	Gear (齿轮)
115	7800337001	Washer (垫圈)
116	7800330002	Screw (螺钉)
117	7800318002	Bracket (浮动挡)
118	6000131005	Screw (螺钉)
119	300318001	Flange (浮动架)
120	300320001	Axletree (变速箱大轴承)
121	2000931008	Screw (螺钉)
122	2000100002	Gear box assembly (齿轮箱总成)
123	7800321001	Gear (齿轮)
124	4000332001	Drive wheel assembly (驱动轮总成)
125	2000325002	Nut (螺母)
126	9300312001	Quoit (垫圈)
127	8700406001	Limitation switch (光电开关)
128	9300312002	Sleeve (衬套)
129	1500300001	Motor (转向电机总成)
130	5800312002	Dust ring (防尘圈)
131	5800312001	Sleeve (防尘圈套)
132	5800335001	Detent ring (孔用挡圈)
133	7300342001	Screw (平端螺丝)
134	5300500002	Switch box assembly (控制盒总成)
135	5300518003	Emergency reverser button cover (紧急换向按钮盖)
136	2000519004	Spring (弹簧)
137	5300500001	Cover assembly (手柄盖总成)
138	4300500004	Stepped switch assembly (行走开关总成)
139	2000507002	Emergency reverser button (紧急换向按钮)

140	4300517001	Handle (手柄)
141	6000131007	Screw (螺钉)
142	1001437003	Washer (垫圈)
143	1200518001	Supporting plate (支撑板)
144	3201431001	Screw (螺钉)
145	6000131006	Screw (螺钉)
146	9300517001	Seat (微动开关座)
147	1000515002	Shell (接插件母胶壳)
148	1000515001	Shell (接插件公胶壳)
149	5300500005	Handle assembly (手柄总成)
150	4300500005	Switch box assembly (控制盒总成)
151	2000442001	Screw (螺钉)
152	4300501004	Handle tube (铝手把)
153	6000502002	Pneumatic spring seat (气弹簧座)
154	2000525012	Joint (气弹簧球头)
155	4600519002	Pneumatic spring complete (气弹簧)
156	2000527002	Snap ring (挡圈)
157	2000520003	Joint (下接头)
158	2000525006	Shaft (轴)
159	1000527001	Snap ring (挡圈)
160	4300501003	Covering plate (盖板)
161	2000542001	Screw (螺钉)
162	2001100021	Charger
163	2001100022	Charger
164	2001100023	Charger
165	2001100024	Charger
166	2001100026	Charger
167	2001100027	Charger
168	2001100028	Charger
169	2001100029	Charger
170	4602400001	Flying rings
171	4601100002	Battery
172	4601100003	Battery
173	2000830001	Screw (防松螺栓)
174	2000937002	Washer (平垫圈)
175	2000937003	Spring Washer (弹簧垫圈)
176	1000239002	Nut (螺母)
177	4601108001	Cover (电线座盖)
178	4600902002	Protect arm(right) (保护臂(右))
179	4600902003	Protect arm(left) (保护臂(左))
180	4600902008	Connect sheath(right) (连接套(右))
181	4600902007	Connect sheath(left) (连接套(左))
182	4600908008	Faceplate (面板)
183	4600912001	Alternately (夹圈)
184	9300912001	Bearing ring (轴承套)
185	4600902001	Protect arm seat (保护臂座)
186	9300902006	Connect board (连接板)

187	300927001	Dust ring (卡簧)
188	4600908004	Arm ring (手臂套)
189	4600925001	Screw (螺钉)
190	1000938001	Screw (螺钉)
191	1000239002	Nut (螺母)
192	4600933002	Pin shaft (轴销)
193	2001231001	Screw (螺钉)
194	2000407001	Emergency stop button (紧急制动开关)
195	2001116002	Battery indicator(No Calculagraph)(电量表)
196	2000507010	Key (钥匙开关)
197	4600908002	Veil (面罩)
198	4600908003	Veil (面罩)
199	4600918001	Fixation dollop (盖板骨架)
200	4600918003	Fixation dollop (盖板骨架)
201	4300934001	Grip (手把座)
202	4600908009	Veil (面罩)
203	1000441005	Screw (半圆头螺钉)
204	4600911001	Cover (紧急开关盖)
205	1000407017	Emergency stop button (紧急开关按钮)
206	2001116002	Battery indicator(No Calculagraph)(电量表)
207	2000507010	Key (钥匙开关)
208	4600908002	Veil (面罩)
209	4600908003	Veil (面罩)
210	4600918001	Fixation dollop (盖板骨架)
211	4600918002	Fixation dollop (盖板骨架)
212	4300934001	Grip (手把座)
213	4600908001	Veil (面罩)
214	4301301001	Link
215	4301301002	Link
216	4301301003	Link
217	4301301004	Link
218	4301301005	Link
219	4301301006	Link
220	4301301007	Link
221	4301301008	Link
222	4301301009	Link
223	4301301010	Link
224	4301301011	Link
225	4301301012	Link
226	4301301013	Link
227	4301301014	Link
228	4301301015	Link
229	4301301016	Link
230	4301301017	Link
231	4301301018	Link
232	4301301019	Link
233	4301301020	Link

234	4301301021	Link
235	4301301022	Link
236	4301301023	Link
237	4301301024	Link
238	4301301025	Link
239	1000339001	Nut (螺母)
240	4301304001	Screw (螺钉)
241	2000512002	Bearing (自润滑轴承)
242	2700327001	Snap ring (挡圈)
243	1000300003	Single wheel assembly (单轮总成)
244	2001037001	Washer (垫圈)
245	4301320001	Bearing (轴承)
246	3501304001	Washer (垫圈)
247	1001036001	Spring pin (弹性销)
248	4301318001	Wheel fork (轮架)
249	4000813003	Shaft (轴)
250	4301318002	Link (连接臂)
251	4000213001	Shaft (轴)
252	4301319001	Spring (小蝶簧)
253	4301334001	Sliding shaft (张紧滑块)
254	4301314001	Idler wheel (滚轮套)
255	2000827001	Snap ring (挡圈)
256	1000332001	Single wheel (单轮)
257	4301314002	Idler wheel (滚轮套)
258	4301313001	Shaft (转轴)
259	4000231002	Screw (螺钉)
260	4301302003	Shaft (转轴)
261	4601302002	Shaft (转轴)
262	1000313001	Shaft (轴)
263	1000225002	Screw (锥端紧定螺钉)
264	1000320002	Bearing (轴承)
265	2000305001	Dust ring (防尘圈)
266	2000312001	Bush (防尘圈挡圈)
267	1000339001	Nut (螺母)
268	4301304001	Screw (螺钉)
269	2000512002	Bearing (自润滑轴承)
270	2700327001	Snap ring (挡圈)
271	1000300004	Double wheel assembly (导向轮)
272	2001037001	Washer (垫圈)
273	4301320001	Bearing (轴承)
274	3501304001	Washer (垫圈)
275	1001036001	Spring pin (挡圈)
276	4301318001	Wheel fork (轮架)
277	4000813003	Shaft (轴)
278	4301318002	Link (连接臂)
279	4000213001	Shaft (轴)
280	4301319001	Spring (小蝶簧)

281	4301334001	Sliding shaft (张紧滑块)
282	4301314001	Idler wheel (滚轮套)
283	2000827001	Snap ring (挡圈)
284	1000320002	Bearing (轴承)
285	4301314002	Idler wheel (滚轮套)
286	4301313001	Shaft (转轴)
287	4000231002	Screw (螺钉)
288	4301302003	Shaft (转轴)
289	4601302002	Screw (螺钉)
290	1000339002	Nut (螺母)
291	1000332004	Loading wheel (前双轮)
292	1000312003	Tube (套管)
293	2000305001	Seal (密封圈)
294	2000312001	Ring (挡套)
295	1000325003	Screw (螺栓)
296	1000302001	Plate (轮架夹板)
297	4600900001	Rubber sheet (踏板)
298	2000536011	Spring pin (弹性销)
299	7300313001	Shaft (轴)
300	7300312001	Washer (垫圈)
301	4000912002	Lubricate axletree (自润滑轴承)
302	2000130002	Screw (螺栓)
303	2500339001	Nut (螺母)
304	2000519009	Pneumatic spring complete (气弹簧)
305	7300325001	Screw (螺栓)
306	2000527002	Ward off (卡簧)
307	7300312002	Washer (垫圈)
308	7800311001	Washer (垫圈)
309	7800330001	Screw (螺栓)
310	2000520003	Tie-in (接头)
311	4300734004	Rubber sheet (橡胶板)
312	2000542003	Screw (螺栓)
313	1000435004	Fuse seat (保险丝固定座)
314	3201131001	Screw (螺栓)
315	9300506001	Fuse (保险丝)
316	1700439001	Nut (螺母)
317	1801106001	Contactora (接触器)
318	1001437003	Washer (垫圈)
319	301031001	Screw (螺栓)
320	2001427001	Washer (垫圈)
321	1000441006	Screw (螺栓)
322	7800400002	1230 Controller (1230控制器)
323	4600400003	1232 Controller (1232控制器)
324	4900406001	Fan (风扇)
325	4601102003	Seat (风扇安装座)
326	4601102002	Radiator (散热架)
327	4300900002	Screw (螺栓)

328	4601200001	Plug type terminal (插拔式端子件)
329	7300400002	Electric appliance assembly (配电板总成)
330	7300418001	Install plate (安装板)
331	4000400025	Circuit board (电路板)
332	4000412001	Washer (垫圈)
333	2001141005	Screw (螺栓)
334	7800400003	Controller (控制器)
335	2001427001	Washer (垫圈)
336	1000441005	Screw (螺栓)
337	7800400002	Controller (控制器)
338	1000441006	Screw (螺栓)
339	4300407002	WPZ Contact (WPZ接触器)
340	4900407001	SW Contact (SW接触器)
341	2000407010	Fuse (保险丝)
342	4300407001	WPZ Contact (WPZ接触器)
343	1800306001	SW Contact (SW接触器)
344	2001141001	Screw (螺栓)
345	2001437006	Washer (垫圈)
346	4300406003	Install plate (安装板)
347	2001437003	Washer (垫圈)
348	9300506001	Fuse (保险丝)
349	7300300001	Balance wheel assembly (万向轮总成)
350	7300300002	Balance wheel assembly(new)(新款万向轮总成)
351	7300330001	Screw
352	7300332001	Screw
353	2000305001	Dust ring (防尘圈)
354	2300312001	Bush (挡套)
355	1000320002	Bearing (轴承)
356	2700332001	Balance wheel (万向轮)
357	2700332003	Balance wheel(new) (新款万向轮)
358	4000312002	Wheel sleeve (轴套)
359	1000339001	Nut
360	1800339002	Nut
361	7301218001	Wheel bracket (支架)
362	7301218002	Wheel bracket(new) (新款支架)
363	7300305001	Pressurize circle (油封)
364	1001031003	Screw (螺栓)
365	7300218001	Wheel sleeve (轮架)
366	7300712002	Mat (垫圈)
367	4300327001	Mat (止动垫)
368	4300304001	Nut (螺母)
369	4600724002	Frame (车架)
370	4600400002	Controller (转向控制器)
371	4600900002	Footboard assembly (踏板总成)
372	4600712002	Roller (滚轮)
373	4600713003	Roller shaft (滚轮轴)
374	7300342001	Driving assembly set screw(驱动总成固定螺丝)

375	4600603009	Valve body (阀板)
376	4600602005	Dust lid (防尘盖)
377	4600603007	Pilot valve (先导阀)
378	4600606001	Connector (电磁接插件)
379	4600615001	Solenoid coil (电磁线圈)
380	4600600003	Oil pump (泵)
381	4600603006	Check valve (单向阀)
382	4600614002	Oil exit pipe (排油管)
383	4600603008	Safety valve (安全阀)
384	2401400001	Hydraulic motor (电机)
385	1000131001	Screw (螺钉)
386	1800601001	Joint sleeve (电动机齿轮连轴套)
387	1800603001	Valve (阀)
388	1800628001	O-ring (O 型圈)
389	4900635001	Tank clamp ring (油箱夹圈)
390	2000931001	Screw (螺栓)
391	4900603001	Oil tank (油箱)
392	2000628010	O-ring (O 型圈)
393	1800639001	Nut (螺母)
394	4900614001	Joint (接管)
395	1000605005	Plug (陶瓷透气塞)
396	1000605006	Cover (油管盖)
397	4900600001	Hydraulic power unit (液压动力单元)
398	1001400001	Hydraulic motor (电机)
399	2000612004	Connecting bearing sleeve (连轴套)
400	1000600006	Valve assembly (阀体)
401	1000628001	O-ring (O 型圈)
402	1000600007	Oil pump (油泵)
403	2000631003	Screw (螺栓)
404	2000631001	Screw (螺栓)
405	1000626002	Oil tank (油箱)
406	1000609001	Washer (垫圈)
407	1000741001	Screw (螺栓)
408	1000614005	Joint (接头)
409	1000605005	Plug (陶瓷透气塞)
410	1000605006	Cover (油管盖)
411	4600614003	Soft oil pipe (软油管)
412	4300331001	Screw (螺钉)
413	4000615001	Joint (接头)
414	8700637001	Washer (垫圈)
415	4000600009	Cylinder body (增力油缸)
416	4000605005	Seal (密封圈)
417	4000605006	Seal (密封圈)
418	4600600001	Cylinder assembly (起升油缸)
419	2000742001	Screw (螺钉)
420	4600603001	Oil pipe (油管)
421	4300639001	Nut (螺母)

422	4300603014	Joint (接头)
423	1000628002	O-ring (O型圈)
424	4300603003	Soft oil pipe (软油管)
425	2000603016	Joint (接头)
426	2000603011	Washer (垫圈)
427	4000600007	Hydraulic power unit(old)(老款液压动力单元)
428	4600600001	Hydraulic power unit(new)(新款液压动力单元)
429	2500612001	Washer (垫片)
430	2500603017	Joint (接头)
431	4600605001	Dust ring (防尘圈)
432	2500605001	Seal washer (密封圈)
433	2000603011	Washer (垫圈)
434	301000001	Brake assembly (电磁制动器)
435	2001021001	Spline (花键轴套)
436	2001427001	Snap ring (轴用挡圈)
437	2001012001	Sleeve (定位套)
438	4600628001	O-ring (O型圈)
439	4001404001	Flat key (平键)
440	301400001	Motor (电机)
441	301431001	Screw (螺栓)
442	301435001	Position sleeve (过渡定位套)
443	2001405001	Dust ring (骨架油封)
444	2001228001	O-ring (O型圈)
445	2001420001	Bearing (轴承)
446	2001427001	Snap ring (轴用挡圈)
447	2001227003	Snap ring (轴用挡圈)
448	2000121005	Gear (齿轮)
449	2001435002	Semicircle key (半圆键)
450	2001425002	Nut (螺母)
451	4601402001	Joint (磁钢头)
452	301427001	Washer (垫圈)
453	2001441001	Screw (螺栓)
454	1801411001	Cover (刹车盘上盖)
455	1801411002	Wire saddle (线套)
456	7801006001	Circuit board (编码器线路板)